

Cat Tower Adjustable Ceiling Anchor Instructions



Adjustable Ceiling “Anchor”. Our tallest cat towers come with an adjustable ceiling anchor for extra stability. The anchor has a simple screw adjustment to accommodate nearly any ceiling height. NO tools are required and when properly adjusted, it will NOT damage your ceiling. See our simple 3-step adjustment process below.

Ace Cat Furniture cat towers with adjustable ceiling anchors:



Cathedral Cat Tower
AC110326-1-15



Hightower Cat Tower
AC110305-12



Manhattan Cat Tower
AC110190-17



Rockefeller Cat Tower
AC110304-36



Watchtower Cat Tower
AC110325-2-15



Westminster Cat Tower
AC110191-15



Windsor Cat Tower
AC110192-18



Step 1

Slide the elastic “sock” up to reveal the ceiling anchor hardware.

It is not necessary to remove the sock completely.

(We have removed the sock for illustrative purposes)



Step 2

Loosen the small silver wing nut at the top of the post, allowing the bolt to turn freely.

Turn the larger brass wing nut counter-clockwise to close the gap between the top of the post and your ceiling.

The ceiling anchor should press firmly against your ceiling.

TIP: Roll the fabric back as far as you can to reveal the hardware.



Step 3

Once the anchor presses firmly against your ceiling, tighten the lower wing nut to lock the post in place.

Check the stability of your cat tower by attempting to wiggle it. Some movement is expected, but the anchor should not move. If your anchor moves, repeat Step 2.

After all adjustments are made, slide the elastic sock back into place on the post and you're done!



Need Help? Call us at 800-404-7068 from 8-5 CST, M-F